 


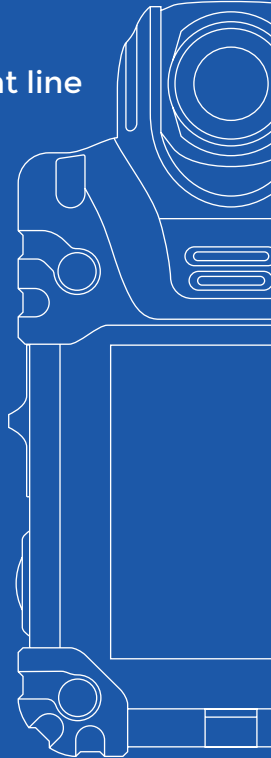

RS2 - X2

With you on the front line

**Quick Start
and User Manual**



Quick start

Introduction

Welcome to the next generation of body worn cameras. For your convenience, the camera is set up and ready to go in three easy steps.

Quick start



Charge

Charge the camera for three hours or until the charging light turns green.



 
Mount

Choose how to mount your camera; you can use either the Klickfast attachments, clips or a lanyard.



Record


Slide the red switch down to start recording. To stop recording, slide the red switch up.

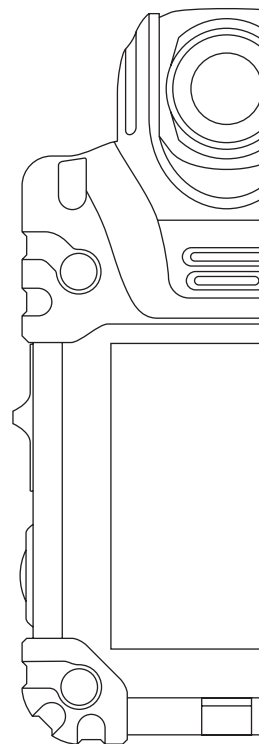

Quick start

1 Charge

 Open the cover on the bottom of the camera and insert into a RS2 docking station. Alternatively, connect to a USB cable.

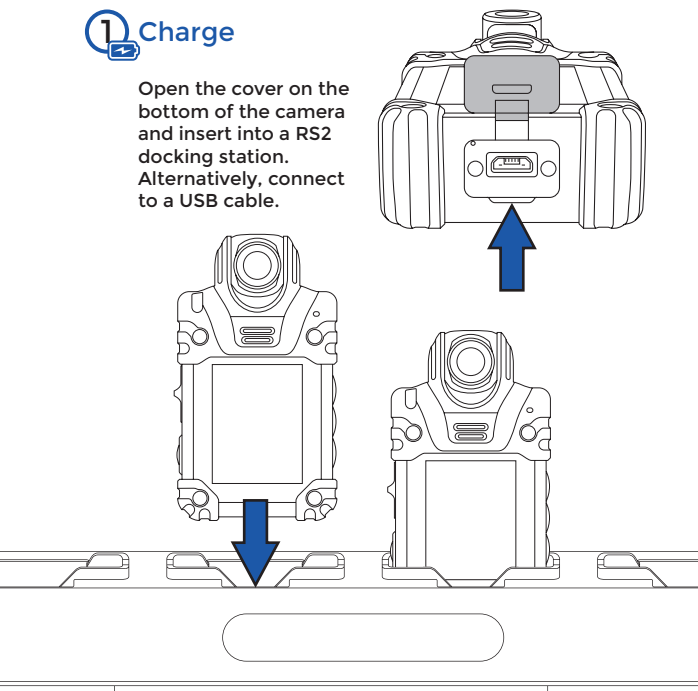


Quick start

2 Mount

Choose your mount:

- Klickfast stud
- Angled klickfast stud (for use with a high mounting position)
- Shirt clip (adjustable for male and female shirts)
- Pocket clip (lanyard)

 Align the mount on the back of the camera and use the screw to secure.

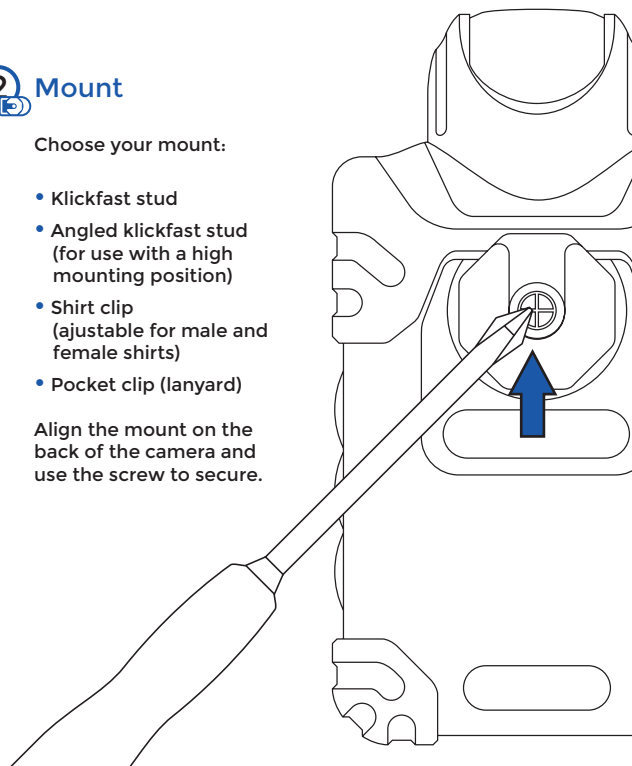

Quick start

3 Record

Pull down the red switch to record.

As confirmation:

 
- The camera will beep three times.
- The LED and the recording light on the screen will flash red.

Pull the switch back up to stop recording.


As confirmation:

- The camera will beep twice.
- The lights will stop flashing.

NOTE: For two actions to stop recording, view the settings, page 13.

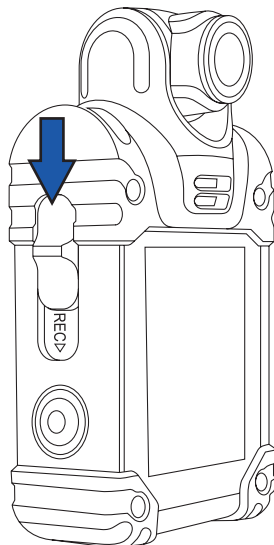

Operation

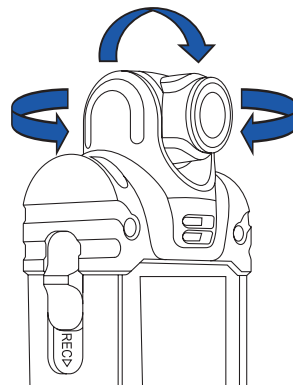 


Camera articulation

CAUTION:
DO NOT OVER ROTATE!
The camera head does not rotate 360°


Power on/off

When the unit is off, press and hold the function button to turn power on.

 Press and hold for longer than 2 seconds to turn off.

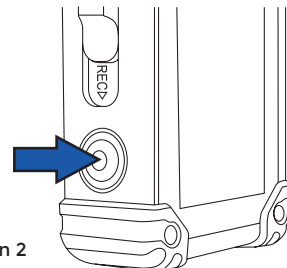

Operation

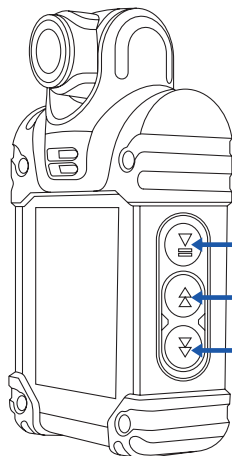 

On board playback

Hold down the **POWER** button to turn the camera on. The camera is now in "preview" mode.

Once on, press the **PLAY** button to open the playback mode.

≡ **PLAY / PAUSE VIDEO**

⏮ **REWIND / SCROLL THROUGH VIDEOS**

⏭ **FAST FORWARD / SCROLL THROUGH VIDEOS**

Show menu options

During preview, press and hold **FWD** and **RWD** simultaneously to bring up menu screen.

NOTE: Menu options are not changeable on camera alone.

Stealth Mode

Hold **RWD** button for three seconds to activate or deactivate Stealth Mode.

Stealth mode enables recording without the front facing screen or LED light.


Function Button



 
Go back

Press once to "go back" in preview mode.

Mark as important

- Press and hold for 2 seconds to mark as important in preview mode.
- Press once during record to mark as important.
- The  symbol will appear in the bottom right corner of the thumbnail

GO BACK / MARK AS IMPORTANT

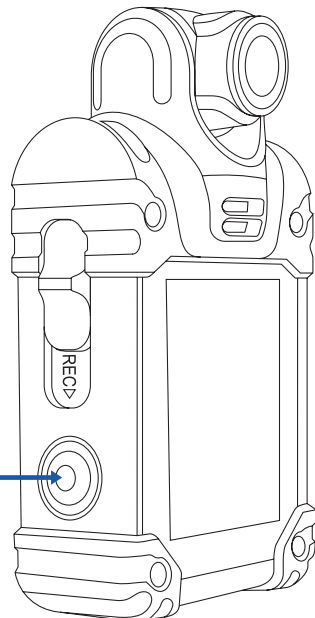


LED light notification

	ON recording	ON not recording	OFF not recording
Not Charging	Flashing RED	RED	No LED on
Charging via Mains Charger	RED & BLUE alternate flashing	BLUE	BLUE
Charged Via Mains Charger	RED & GREEN alternate flashing	GREEN	GREEN
Charging via Docking Station plugged ONLY into Mains	RED & BLUE alternate flashing	BLUE	BLUE
Charged via Docking Station plugged ONLY into Mains	RED & GREEN alternate flashing	GREEN	GREEN
Charging via USB Cable plugged into PC (In Mass Storage Mode)	N/A	RED & BLUE alternate flashing	N/A
Charged via USB Cable plugged into PC (In Mass Storage Mode)	N/A	RED & GREEN alternate flashing	N/A
Charging via Docking Station plugged into both Mains and PC (In Mass Storage Mode)	N/A	RED & BLUE alternate flashing	N/A
Charged via Docking Station plugged into both Mains and PC (In Mass Storage Mode)	N/A	RED & GREEN alternate flashing	N/A

Edit menu settings

Through DEMS

 
In the administration tab select "Reveal camera settings".

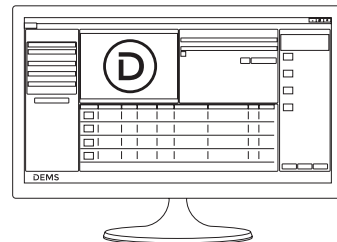

Without DEMS

NOTE: You must be the administrator on the computer to change the camera settings.

 - 1) Download the **Reveal camera settings manager** from www.revealmedia.com/downloads
- 2) Run the program on the computer
- 3) Select which camera you want to edit from the list on the left and edit the options on the right.

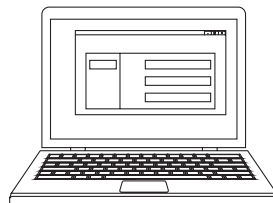

Editable menu settings

1. RESOLUTION	1280 x 720 30FPS (DEFAULT) 848 x 480 60FPS 1920 x 1080 30FPS 1440 x 1080 30FPS
2. PRE-RECORDING Stores 30 seconds prior to record activation	ON OFF (DEFAULT)
3. AUDIO ALARMS	ON (DEFAULT) OFF
4. WHITE BALANCE	AUTO (DEFAULT) SUNNY / CLOUDY / FLUORESCENT/INCANDESCENT
5. LANGUAGE	ENGLISH (DEFAULT)
6. TIME AND DATE STAMP	ON (DEFAULT) OFF
7. TIME AND DATE SETUP	SET YYYY/MM/DD HR/MIN/SEC
8. START IN STEALTH MODE	ON OFF (DEFAULT)
9. AUTO LCD OFF	30 SECS / 2 MIN / 5 MINS / OFF


Editable menu settings

10. DEFAULT SETTINGS	NO / YES
11. UNIT ID SETUP	USER SET (five alphanumeric)
12. PRE-RECORD MUTE No audio is recorded during the pre-record section of video. Once the user slides into record mode, audio is then recorded	ON OFF (DEFAULT)
13. PROTECTED MODE The files cannot be played back on standard media players. Playback requires Reveal Media DEMS V3 or above	ON OFF (DEFAULT)
14. TRUSTED MODE RS2 - X2 will not mount as mass storage device unless connected to Reveal Media DEMS V3 or above	ON OFF (DEFAULT)
15. RECORD OFF MODE For single or two actions to stop recording	SLIDER ONLY (DEFAULT) SLIDER PLUS BUTTON
16. FIRMWARE VERSION	Displays what version of firmware is installed on the device

WARNING!


- Camera head does not rotate completely 360°. **FORCING IT WILL CAUSE DAMAGE TO THE CAMERA HEAD!**
- Please take care when connecting and disconnecting the USB cable.

 Mounting and usage options

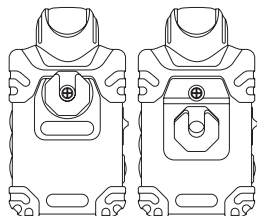


Klickfast

 Standard or angled. Use the angled klickfast when using a high mounting position.

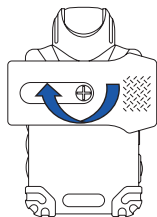

Shirt Clip

 
The shirt clip can be reversed for female shirts.

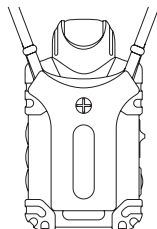

Lanyard Clip

For use of a lanyard around the neck.

 Mounting and usage options

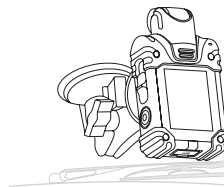

For in-car use

Attach suction mount to windscreen or dashboard for in-car camera. (optional extra)



Shoulder mount

- harness
- epaulette mount

For use with shirted uniforms. (optional extra)

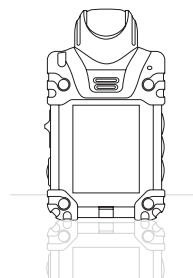 


Table top

For use in interviews and other static situations.